


# Intercom handset user guide

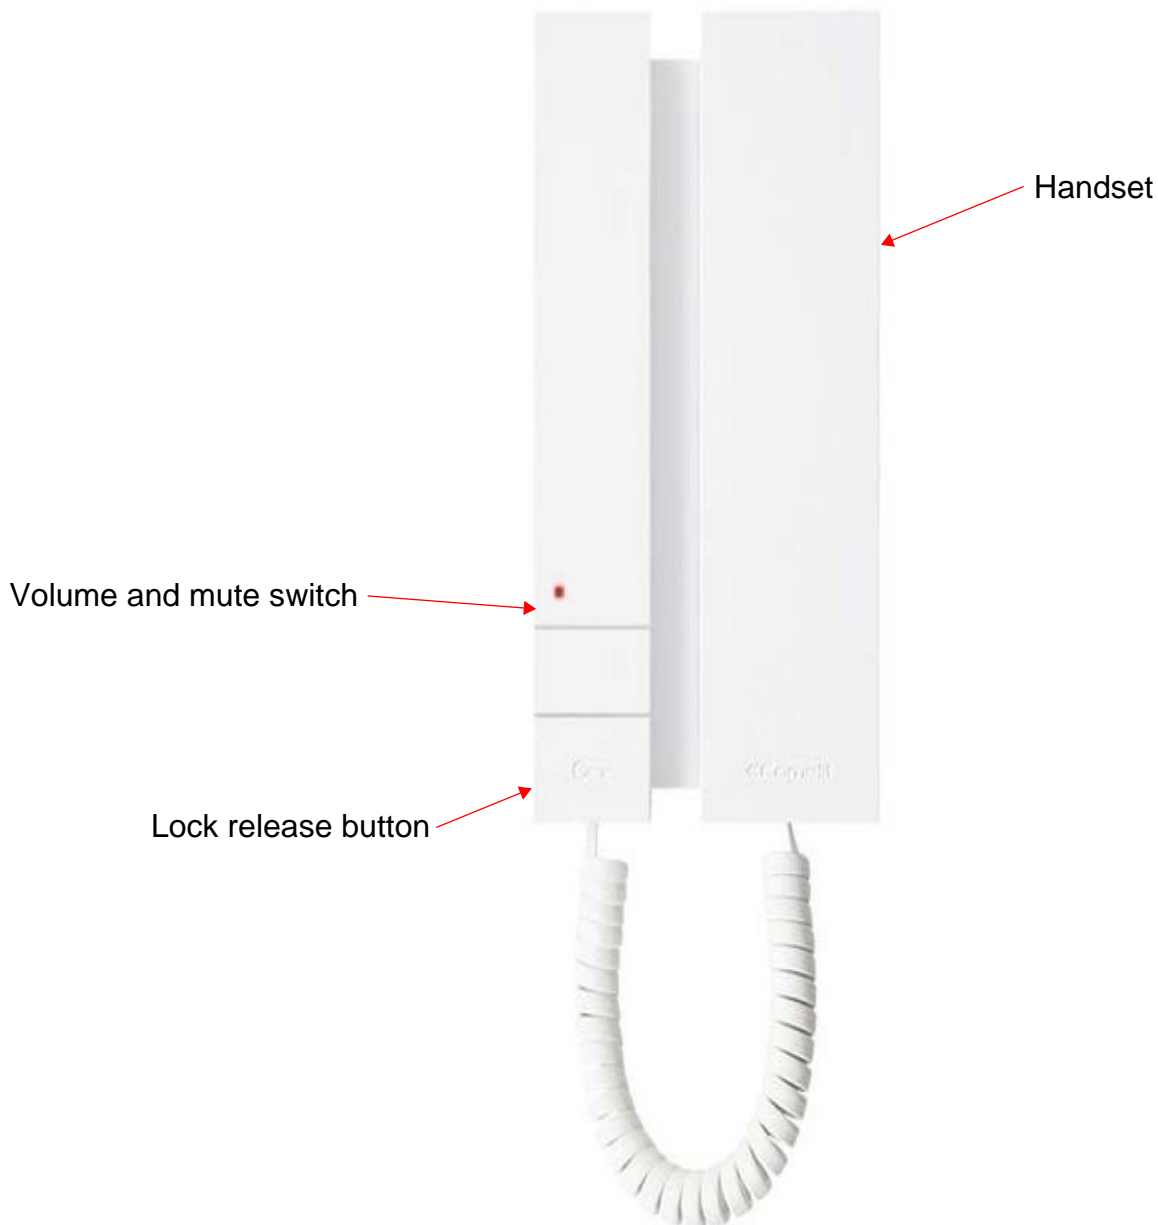

To answer a call please lift the handset and talk to the caller.

Should you wish to unlock the entrance door and allow caller to access the building press the lock release button.

The volume can be adjusted with the slide switch to the left side, if the red indicator is displayed then the handset is on mute and no audible call will be made.